

CLI COMMANDS

core show file formats Displays file formats

core show file version List versions of files used to build Asterisk

core show functions Shows registered dialplan functions

core show function Describe a specific dialplan function

core show globals Show global dialplan variables

core show hints Show dialplan hints

core show image codecs Displays a list of image codecs

core show image formats Displays image formats

core show license Show the license(s) for this copy of Asterisk

core show profile Display profiling info

core show switches Show alternative switches

core show threads Show running threads

core show translation Display translation matrix

core show uptime Show uptime information

core show version Display version info

core show video codecs Displays a list of video codecs

core show warranty Show the warranty (if any) for this copy of Asterisk

dahdi destroy channel Destroy a channel

dahdi restart Fully restart DAHDI channels

dahdi show cadences List cadences

dahdi show channels Show active DAHDI channels

dahdi show channel Show information on a channel

dahdi show status Show all DAHDI cards status

database del Removes database key/value

database deltree Removes database keytree/values

database get Gets database value

database put Adds/updates database value

database show Shows database contents

database showkey Shows database contents

CLI COMMANDS

dialplan add extension Add new extension into context

dialplan add ignorepat Add new ignore pattern

dialplan add include Include context in other context

dialplan reload Reload extensions and *only* extensions

dialplan remove extension Remove a specified extension

dialplan remove ignorepat Remove ignore pattern from context

dialplan remove include Remove a specified include from context

dialplan show Show dialplan

dnsmgr refresh Performs an immediate refresh

dnsmgr reload Reloads the DNS manager configuration

dnsmgr status Display the DNS manager status

echolink dbdump Dump entire echolink db

echolink dbflush Flushing echolink db

echolink dbget Look up echolink db entry

echolink debug level Enable echolink debugging

feature show Lists configured features

feature show channels List status of feature channels

file convert Convert audio file

g729 debug Toggle g729 codec frame size statistics

group show channels Display active channels with group(s)

help Display help list, or specific help on a command

http show status Display HTTP server status

iax2 dump registry Dump IAX registration data

iax2 provision Provision an IAX device

iax2 prune realtime Prune a cached realtime lookup

iax2 reload Reload IAX configuration

iax2 set debug Enable IAX debugging

iax2 set debug jb Enable IAX jitterbuffer debugging

iax2 set debug jb off Disable IAX jitterbuffer debugging

CLI COMMANDS

iax2 set debug off Disable IAX debugging

iax2 set debug trunk Enable IAX trunk debugging

iax2 set debug trunk off Disable IAX trunk debugging

iax2 show cache Display IAX cached dialplan

iax2 show callnumber usag Show current entries in ip Call number limit table

iax2 show channels List active IAX channels

iax2 show firmware List available IAX firmwares

iax2 show netstats List active IAX channel netstats

iax2 show peers List defined IAX peers

iax2 show peer Show details on specific IAX peer

iax2 show provisioning Display iax provisioning

iax2 show registry Display IAX registration status

iax2 show stats Display IAX statistics

iax2 show threads Display IAX helper thread info

iax2 show users List defined IAX users

iax2 test losspect Set IAX2 incoming frame loss percentage

indication add Add the given indication to the country

indication remove Remove the given indication from the country

indication show Display a list of all countries/indications

keys init Initialize RSA key passcodes

keys show Displays RSA key information

local show channels List status of local channels

logger mute Toggle logging output to a console

logger reload Reopens the log files

logger rotate Rotates and reopens the log files

logger show channels List configured log channels

manager show command Show a manager interface command

manager show commands List manager interface commands

manager show connected List connected manager interface users

CLI COMMANDS

manager show eventq List manager interface queued events

manager show users List configured manager users

manager show user Display information on a specific manager user

mixmonitor Execute a MixMonitor command.

module load Load a module by name

module reload Reload configuration

module show List modules and info

module show like List modules and info

module unload Unload a module by name

no debug channel

originate Originate a call

realtime load Used to print out RealTime variables.

realtime update Used to update RealTime variables.

restart gracefully Restart Asterisk gracefully

restart now Restart Asterisk immediately

restart when convenient Restart Asterisk at empty call volume

rpt cmd Execute a DTMF function

rpt core_debug level Enable app_rpt kb4fxc_debugging

rpt debug level Enable app_rpt debugging

rpt dump Dump app_rpt structs for debugging

rpt fun Execute a DTMF function

rpt fun1 Execute a DTMF function

rpt irlpplay Play Back an Audio File Locally

rpt localnodes Dump list of local node numbers

rpt localplay Play Back an Audio File Locally

rpt lookup Perform a node database lookup for <node number>

rpt lstats Dump link statistics

rpt nodes Dump node list

rpt page Page a user on a node

CLI COMMANDS

rpt playback Play Back an Audio File Globally

rpt reload Reload app_rpt config

rpt restart Restart app_rpt

rpt sendall Send a Text message to all

rpt sendtext Send a Text message to specific node

rpt setvar Set an Asterisk channel variable

rpt showvars Display Asterisk channel variables

rpt stats Dump node statistics

rpt xnode Dump extended info

rtcp debug ip Enable RTCP debugging on IP

rtcp debug Enable RTCP debugging

rtcp debug off Disable RTCP debugging

rtcp stats Enable RTCP stats

rtcp stats off Disable RTCP stats

rtp debug ip Enable RTP debugging on IP

rtp debug Enable RTP debugging

rtp debug off Disable RTP debugging

say load set/show the say mode

show parkedcalls Lists parked calls

soft hangup Request a hangup on a given channel

stop gracefully Gracefully shut down Asterisk

stop now Shut down Asterisk immediately

stop when convenient Shut down Asterisk at empty call volume

stun debug Enable STUN debugging

stun debug off Disable STUN debugging

susb active Change commanded device

susb key Simulate Rx Signal Present

susb set debug Radio Debug

susb set debug off Radio Debug

CLI COMMANDS

susb tune Radio Tune

susb unkey Simulate Rx Signal Lusb

transcoder show Display DAHDI transcoder utilization.

udptl debug Enable UDPTL debugging

udptl debug ip Enable UDPTL debugging on IP

udptl debug off Disable UDPTL debugging

usrp show